

3


Parts required and Amounts



30 x #12-24 x 2" Wafer Socket
Self drilling



5 Composite planks at 48"

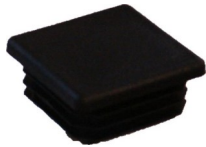

9 Plastic Plugs 1.5" x 1.5"



3 Aluminum Frame Braces



18 #12 Self Drilling
Pan Head screws



3 Aluminum Frames



U-FAB BOATS®

Product/Service Information

Aluminum Frame Seats 4 ft




Visit our web site at

459 County 29, R.R. #4
Smiths Falls, Ontario, K7A 4S5
Canada

Phone: 613-283-1888 Fax: 613-205-0885
E-mail: ken@u-fabboats.com

1

Aluminum Frame Seating 4 ft

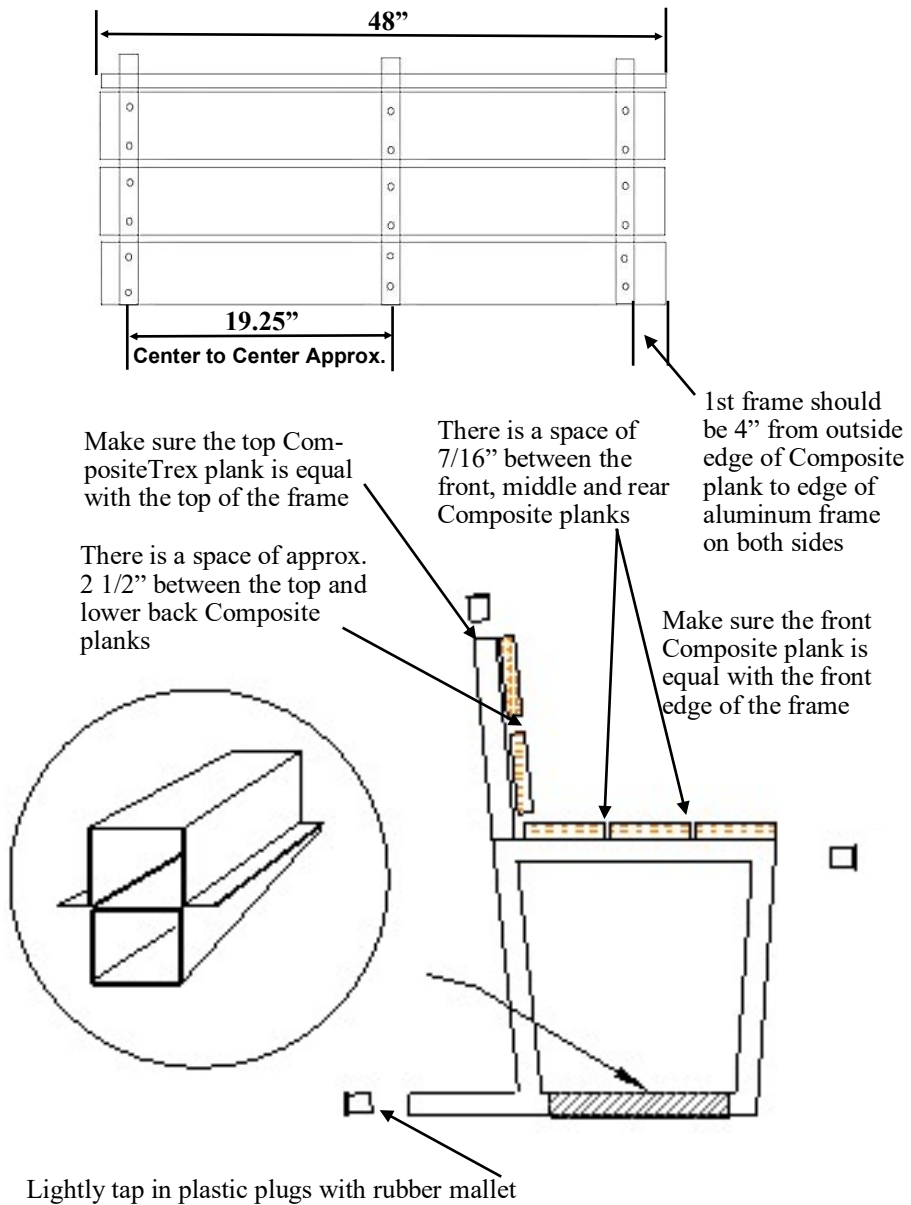

2

Aluminum Frame Seating 4 ft

Pre-Drill using screw pilot guide #12

with adjustable drilling depth and countersink.

Adjust the screw pilot to the desired hole depth and drill the hole until countersinking is complete and insert screw.

Drill Composite only



Use 2 self drilling on Composite (see below) to attach each Composite plank to each frame.

